

Accessories Overview

	For u	se with	Fireray			For us	e with	Fireray	
	5000	3000	50R/ 100R	2000 EExd	3	5000	3000	50R/ 100R	2000 EExd
5000-005: Universal Mounting Bracket.	M	П	M	П	3000-201: Adjustment Bracket.	V	$ \sqrt{} $	$ \sqrt{} $	П
For use with Fireray® 5000 and accessories.		Ш		Н	Adjustment Bracket for Fireray® 3000 offering				
Bracket pivots for accurate alignment of beam					360° rotation plus 180° adjustment; can also				
detector and prisms.					be used with Prism Adaptor Plates.				
	8								
5000-201: Adjustment Bracket.	V				3000-202: Flush Mount Plate.		\checkmark		
Adjustment Bracket for Fireray® 5000 offering 360° rotation plus 130° adjustment.					Flush Mount Plate for Fireray® 3000				
5000-201: Adjustment Bracket. Adjustment Bracket for Fireray* 5000 offering 360° rotation plus 130° adjustment.	\				(requires the F3000 base PCB). 3000-202: Flush Mount Plate. Flush Mount Plate for Fireray® 3000 (requires the F3000 base PCB).				
5000-007: 4 Prism Adaptor Plate. Comes pre-drilled to mount 4 prisms. Designed to mount on the Universal Mounting Bracket 5000-005 or the Fireray® 3000 Adjustment Bracket 3000-201. Prisms and Brackets are ordered separately.			lacktriangle		1000-019: Protective Wire Cage. Fireray® 5000 Controller Protective Wire Cage. Made to mount to a flat surface. Includes 4 Philips Head screws and mounting hardware.	Ĭ			
5000-008: Single Prism Adaptor Plate. Comes pre-drilled to mount prism. Designed to mount on the Universal Mounting Bracket 5000-005 or the Fireray® 3000 Adjustment Bracket 3000-201. Prisms and Brackets are ordered separately.	lacktriangle		lacktriangledown		1000-018: Protective Wire Cage. Fireray® 5000 Detector Protective Wire Cage. Made to mount to a flat surface. Includes 4 Philips Head screws and mounting hardware.	ď			

5000-006: Prism Wall Bracket. Reflector Wall Bracket comes pre-drilled to mount 1 (up to 50 m) or 4 (50 to 100 m) orisms. Hole pattern on side mounting flange imilar to Unistrut. Prisms ordered separately.					1000-020: Protective Wire Cage. Fireray® 50/100 R Detector Protective Wire Cage. Made to mount to a flat surface. Includes 4 Philips Head screws and mounting hardware.				
	For us	e with	Fireray			For us	e with	Fireray	
	5000	3000	50R/ 100R	2000 EExd		5000	3000	50R/ 100R	EExd
1000-021: Protective Wire Cage.				V					
Fireray* 2000 Beam Detector Protective Wire Cage. Made to mount to a flat surface. Includes 4 Philips Head screws and mounting hardware.					5000-204: Anti-Condensation Heater. Anti-Condensation Heater and Bracket for use with Fireray 5000 detector head or detector head and alignment bracket. Detector head not included.	\text{\ti}\text{\ti}}}\tittt{\text{\text{\texi}\text{\text{\text{\text{\text{\text{\tett{\texi}\text{\text{\text{\texi}\text{\text{\texi}\text{\text{\texi}\text{\text{\texi}\text{\text{\text{\text{\texi}\text{			
5000-014: Universal Ceiling Mount. For use with Fireray® 5000, 2000, 3000 and 50R/100R prism and Universal Bracket.	lacktriangledown	¥	¥	¥					
0201: Alignment Tool. For use with Fireray® 2000 EExd. This allows one-man to set up and service a Fireray®. Requires a 4th conductor to be run from control box to receiver head.				¥	3000-204: Anti-Condensation Heater. Anti-Condensation Heater and Bracket for use with Fireray® 3000 Transmitter/Receiver or Transmitter/Receiver and universal bracket. Transmitter/Receiver not included.		T		
23835: Surface Mount Wall Bracket. For use with Fireray® 2000 EExd. Bracket pivots horizontally and vertically for accurate alignment of beam detector. Detector head not included.					5100-204: Anti-Condensation Heater. Anti-Condensation Heater and Bracket for use with Fireray® 50R/100R detector or detector and alignment bracket. Detector not included.			\	

For more information on these products, please contact us:



T: 00353 47 86274 / 00353 47 86663

E: Sales@irishsafetysystems.ie